# Quick Reference Guide

- FL180


#### **Description**

The FL180 is a stable and flexible floor lift that can be used in all types of lifting situations. It allows lifting from high surfaces, such as a chair, bed, wheelchair or commode, in addition to lifting from the floor. Easy to maneuver and transport, store and set up, the FL180 has everything you need in a floor lift. Its base can be adjusted electrically or manually for greater flexibility. The floor lift also has manual or electrical emergency lowering.



#### Part no:

FL180 kit North America: 70967-NA FL180 kit Australia: 70967-AU FL180 kit Great Britain: 70967-GB FL180 kit Japan: 70967-JP FL180 kit Europe: 70967-EU

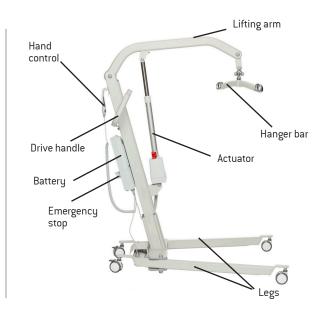

#### Using the lift



Select and position sling around the patient according to sling instructions.

Use hand control to position carry bar directly above the patient.



Attach the head sling loops to carry bar first, than leg straps to leg hooks.



Raise the patient (up on hand control) and as raises check to ensure straps are firmly in place. Raise the patient up until obstacles are clear, hold sling and position/move patient as needed.



Lower patient (down on hand control) until in desired position. Continue to lower until all straps are slack to remove

#### Helpful Troubleshooting Tips!


If lift is NOT working, make sure unit is unplugged but has charge and emergency stop button is not engaged.

## Quick Reference Guide

### - FL180


#### **Hanger Bars**

The FL180 is delivered with a 2-point hanger bar of 20" (50 cm). There is also optional hanger bars that can be ordered as accessories: 14" (37 cm) and 18,5" (47 cm). Secure sling on hook as supplied by instructions before lifting. Always double check security of loops.

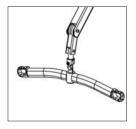


#### **Braking and Casters**

The lift has two braked castors. Castors should NOT be braked when lifting, only when loading and unloading

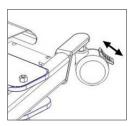

#### **Hand Control**

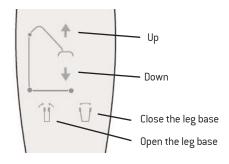

#### **Emergency Lowering**

To lower lift manually, slide red tab up. The lift arm will gradually lower (lift must be loaded with weight). To stop lowering, release the tab.



#### **Display Panel and Lights**



Emergency Stop Button.

A pen can be placed in the hole above the up and down arrow for lowering and raising lift.

Charge Indicator gives battery charge levels.

Service Indicator will blink every 12 months or after 8000 cycles. (This is reset by holding up and down button on handle control for 5 seconds, once lift has been inspected).



IMPORTANT! This quick reference guide does not replace the user manual which can be downloaded at www.humancaregroup.com

#### AUSTRALIA

Unit 9, 271 Wells Road Chelsea Heights, Victoria 3196 Phone:- +61 3 8773 1111 Fax:- +61 3 9773 4008 Email: info.au@humancaregroup.com

#### CANADA

10-155 Colonnade Road Ottawa, ON K2E 7K1 Phone:- 613.723.6734 Fax:- 613.723.1058 Email: info.ca@humancaregroup.com

#### SWEDEN

Årstaängsvägen 21C 117 43 Stockholm Phone:- +46 8 665 35 00 Fax:- +46 8 665 35 10 Email: info.se@humancaregroup.com

#### UNITED STATES

4210 S. Industrial Drive, Suite 160
Austin, TX 78744
Phone:- 512.476.7199
Fax:- 512.476.7190
Email: info.us@humancaregroup.com